




Huawei FusionSolar App Manual




1. AppGallery

- The first step is to download the AppGallery app (a Huawei app) from Google. Download link:
- <https://appgallery.huawei.com/Featured>

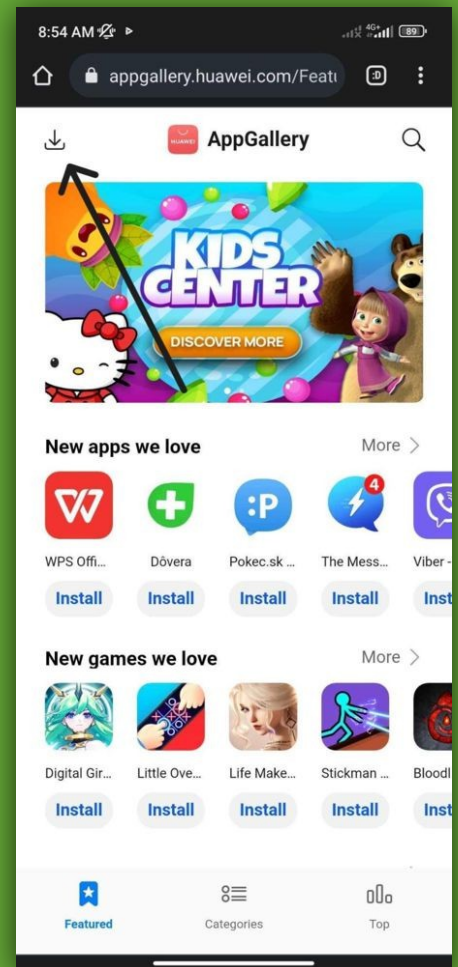

2. FusionSolar

- Once AppGallery is installed, you need to download the FusionSolar app
Or you can download FusionSolar directly via this link:
- <https://eu5.fusionsolar.huawei.com/pvmswebsite/app.html>

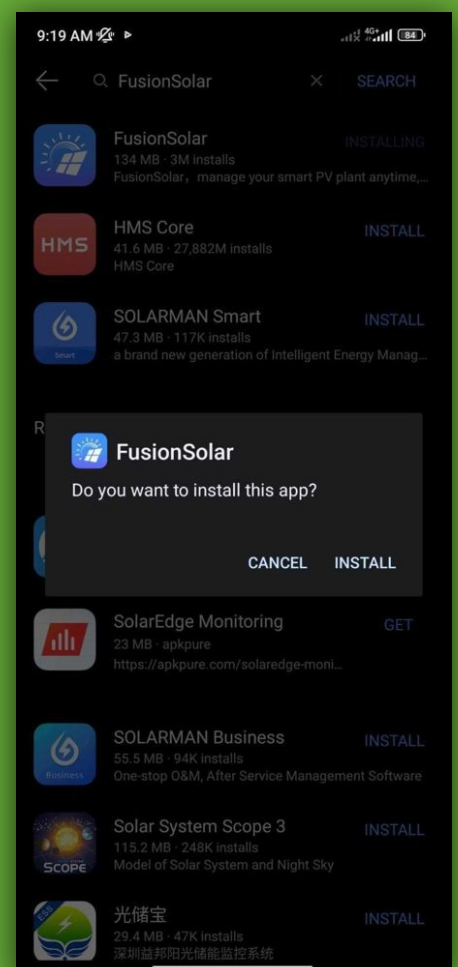

3. Login



- You will then need to log in to FusionSolar.
- You log in using your email address.
- You will receive an invitation to the FusionSolar app via email, where you will find your initial login password. After logging in, the app will ask you to set the password you wish to use. Don't forget to write it down somewhere so you don't have to reset it again.
- The invitation is valid for 7 days; after that, it will be deactivated and you will need to call our technical support team at ECOprodukt so that we can reactivate it for you!

4. First steps

After logging in, you will see a screen like this:

Explanation:

- 1. Today's energy generated
- 2. Money saved today
- 3. Indicator showing the rate at which the battery is discharging or charging
- 4. If you see a positive number, this indicates how much energy you are drawing from the grid; a negative number indicates how much energy you are feeding into the grid
- 5. Current household consumption
- 6. Battery charge percentage
- 7. Current energy production from the panels



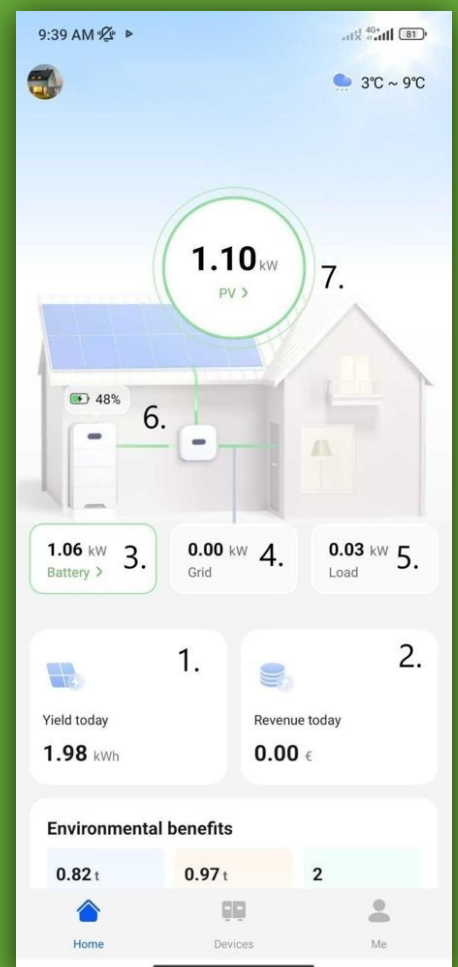
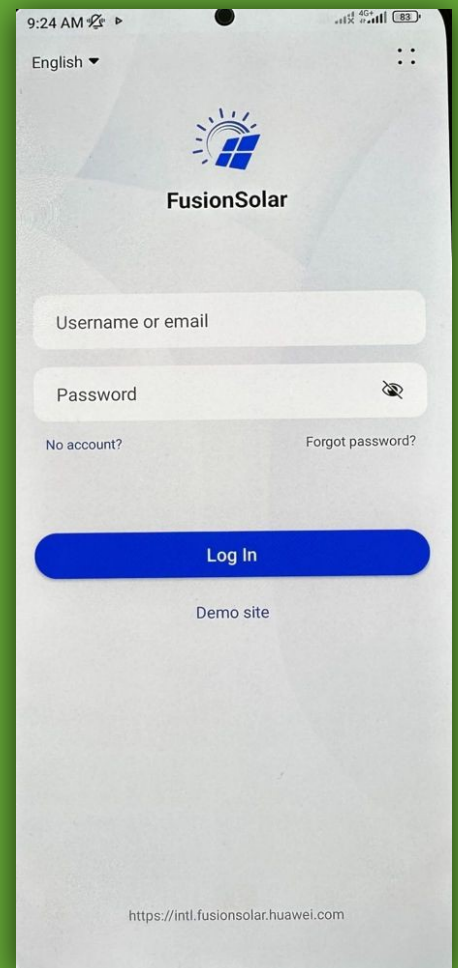


5. Devices

- In the 'Devices' column, you can see the devices connected to your power plant.


6. Inverter

- Clicking on Inverter will open a window where you can view: basic information about the inverter, historical data including graphs that you can customise to suit your needs, and real-time information.

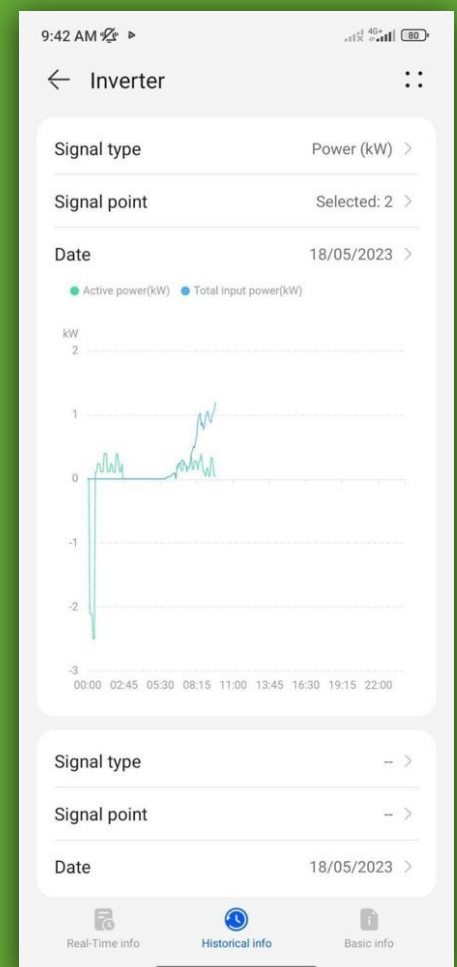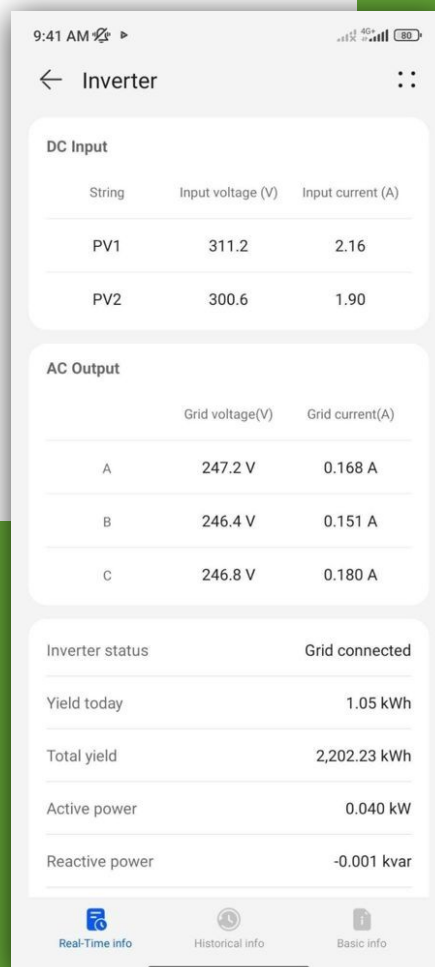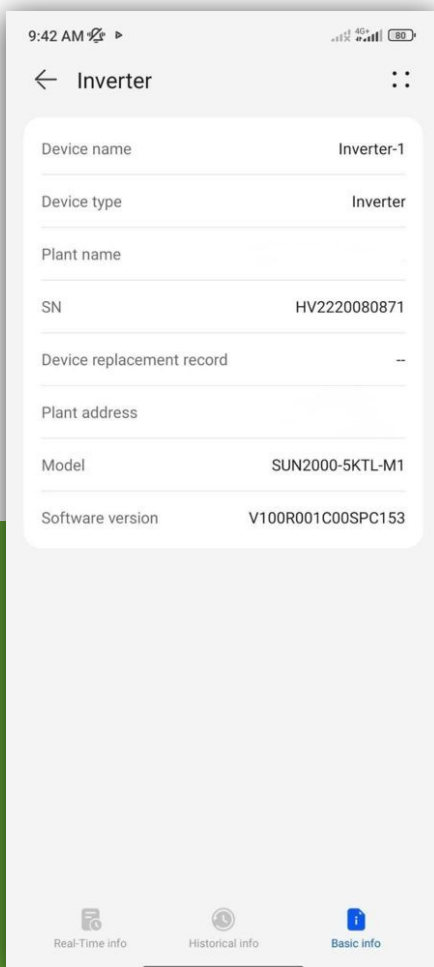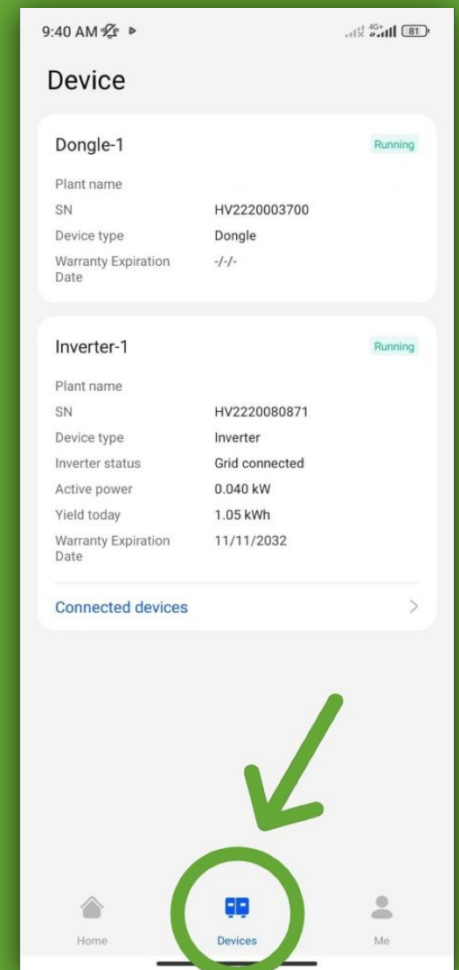


7. My account

- Clicking on the “Me” tab will open a window displaying basic details about your account. Here you can set (Plant management) the power plant name, address and other details.

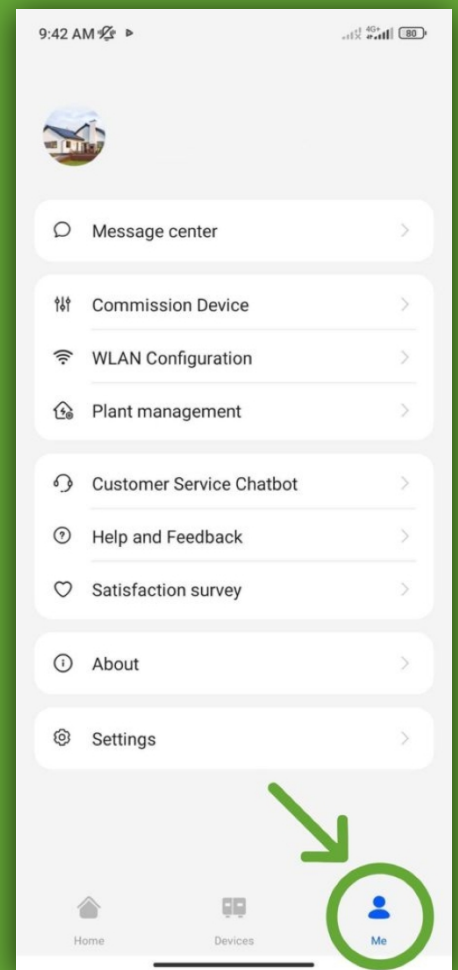


8. Wi-Fi network

- If you have changed your home Wi-Fi router, you must connect the inverter to the new Wi-Fi network. This can be done in the “Me” section under “Commission Device” as follows:
- Select the “PV Product” option
- Click on the third icon from the top left (image of the inverter)

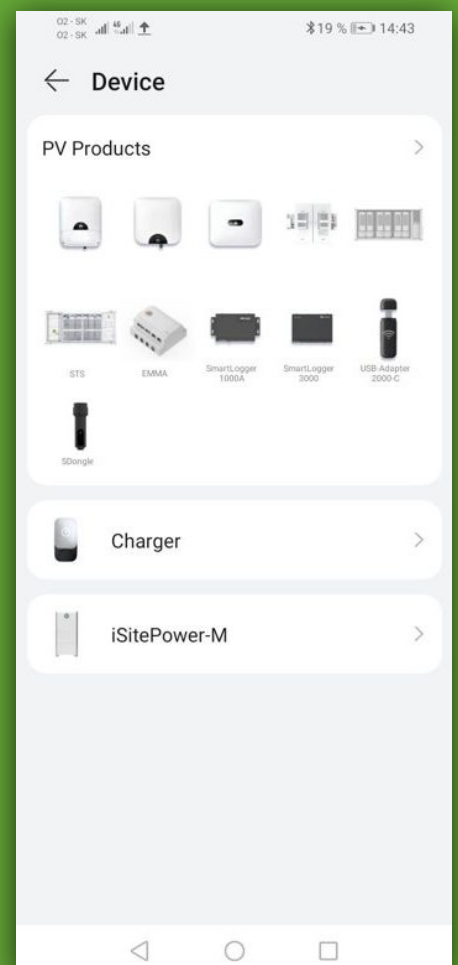


9. Scan the QR code

- **Scan the inverter's QR code located on the right-hand side, then connect to the SUN2000xxx-xxxx inverter's Wi-Fi**

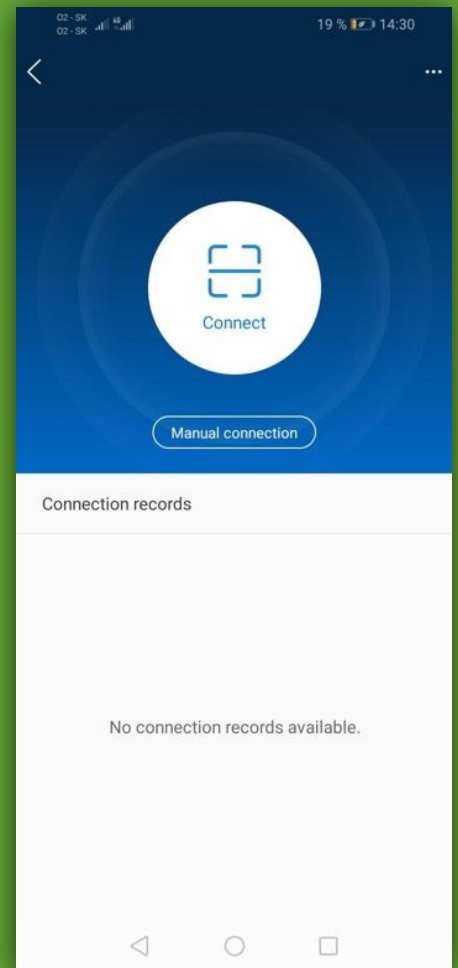


10. Settings

- **Once connected to the inverter via the QR code, the settings menu will appear; select the 'Settings' option.**

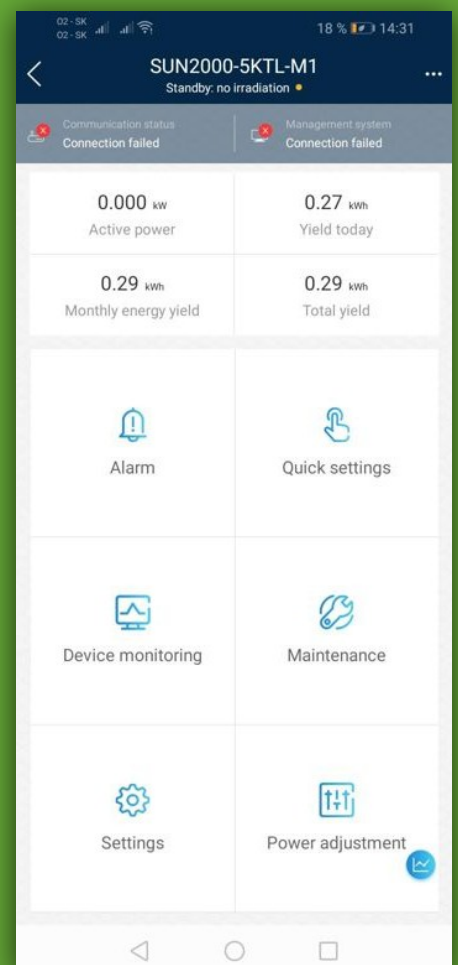

11. Communication configuration

- After opening the settings, a menu will appear where you should select 'Communication configuration'.

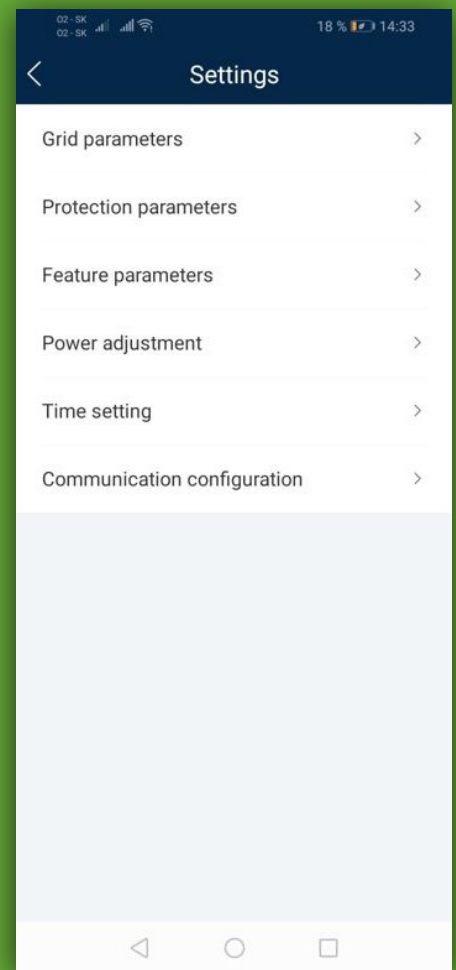

12. WLAN connection

- Next, select the Router connection setting option.
- In the final step, select WLAN connection, enter your home Wi-Fi details and confirm the password for your home Wi-Fi network.

