

Smarterouter


wireless communication of two or more pairs

1) In the Smarterouter settings, the transmission channel must be changed.
A PC and a USB-to-RS485 converter are required.




USB-to-RS485 converter

2) Using the DIP switch on the Smarterouter, set both pins to OFF (up) and connect the power supply.

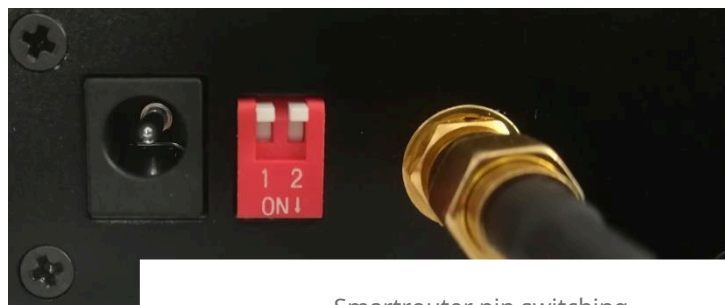

Smarterouter pin switching

3) Connect the RS485 converter directly to the Smarterouter and connect it to the PC.

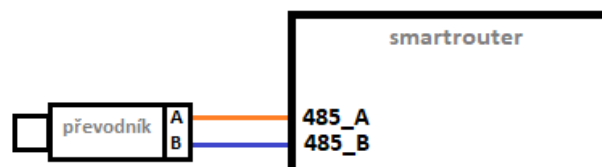

Direct communication connection


Configure the settings in the RF Setting program.




Language selection




Port selection and opening

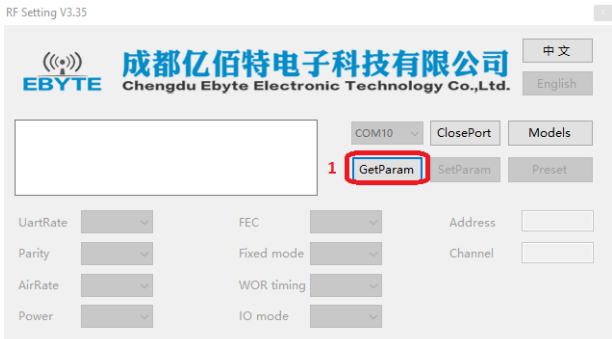


Retrieving the configured parameters

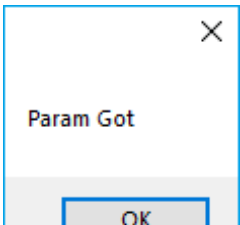

Request sent

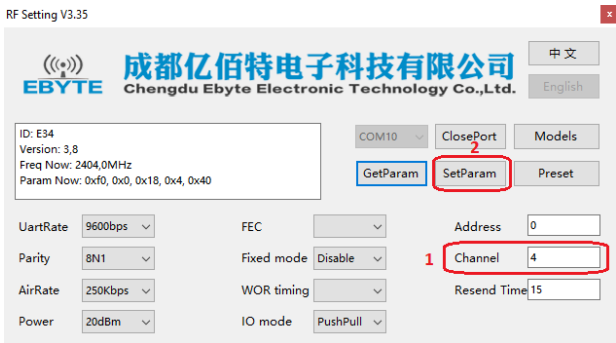

Change the "Channel" and save with "SetParam"

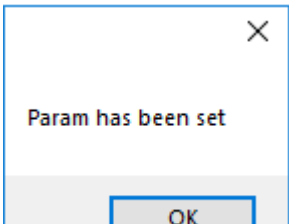

Successfully configured

Change the channel on both paired units.

