

SAFETY INFORMATION


- To prevent injury to yourself and others or damage to the device, please read the safety information in this manual carefully!
- Users of heated clothing must be aware of the first signs of possible burns. If you feel a tingling sensation or if your skin turns red, there is a risk of burns. Switch off the device immediately and stop using it. If you think you have been burned, consult a doctor.
- Do not allow children under 6 years of age or mentally disabled persons to use the device. Do not use the device while sleeping or when under the influence of drugs, alcohol or medication. Use the device with extra caution when distracted by activities such as driving, horse riding, cycling, running and others. Risk of burns!
- Always check that the device and its accessories are not damaged before use. Do not use a damaged device or damaged accessories. A damaged, punctured or swollen battery should NOT be charged. Place the battery in a fireproof container and dispose of it. If you notice any unusual odours, noises, smoke or liquids, stop using the device immediately.
- Do not disassemble, modify or repair the device. Use batteries, chargers, accessories and consumables approved by the manufacturer.
- Do not immerse the device in water when it is connected to the battery. The device is weather-resistant, not waterproof. Do not immerse the charger!
- Avoid temperatures above 80 °C (180 °F). Batteries may explode in high temperatures and in the presence of fire. Dispose of used batteries in accordance with local laws and regulations.
- The device may interfere with other electronic devices, such as pacemakers and others. Do not use if you have reduced sensitivity to temperature. Consult your doctor before use.
- Keep the product out of the reach of small children, as it contains small parts that could be swallowed.
- Always turn off the device and remove the batteries when not in use or unsupervised.

SAFETY INFORMATION

- To avoid injury to yourself and others or damage to the device, please read the safety information in this manual carefully!
- Users of heated clothing must pay attention to the first signs of possible burns. If you feel a tingling sensation or if your skin turns red, there is a risk of burns. Switch off the device immediately and stop using it. If you think you have been burned, consult a doctor.
- Do not allow children under 6 years of age or mentally disabled persons to use the device. Do not use the device while sleeping or when under the influence of drugs, alcohol or medication. Use the device with extra caution when distracted by activities such as driving, horse riding, cycling, running and others. Risk of burns!
- Always check that the device and its accessories are not damaged before use. Do not use a damaged device or damaged accessories. A damaged, punctured or swollen battery should NOT be charged. Place the battery in a fireproof container and dispose of it. If you notice any unusual odours, noises, smoke or liquids, stop using the device immediately.
- Do not disassemble, modify or repair the device. Use batteries, chargers, accessories and consumables approved by the manufacturer.
- Do not immerse the device in water when it is connected to the battery. The device is weather-resistant, not waterproof. Do not immerse the charger!
- Avoid temperatures above 80 °C (180 °F). Batteries may explode in high temperatures and in the presence of fire. Dispose of used batteries in accordance with local laws and regulations.
- The device may interfere with other electronic devices, such as pacemakers and others. Do not use if you have reduced sensitivity to temperature. Consult your doctor before use.
- Keep the product out of the reach of small children, as it contains small parts that could be swallowed.
- Always switch off the device and remove the batteries when not in use or unsupervised.

HEATED GLOVES

- Charge the glove batteries until the charger indicator light turns green. The charging time for an empty battery is typically 4-6 hours.
- Carefully connect the fully charged batteries to the gloves.

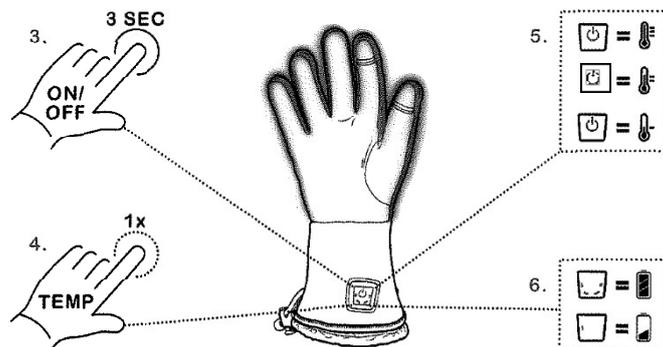


- Press the ON/OFF button for at least 3 seconds to activate (and deactivate) the gloves.
- Quickly press the button once to select the desired heating mode.
- The colour of the button indicates the set heating level. Red (high), blue (medium), green (low).
- The 4 small LED lights on the button indicate the current remaining battery capacity.

." CAUTION! If you feel an unpleasant tingling sensation or if your skin . red, there is a risk of burns. Switch off the device immediately and stop

HEATED GLOVES

- Charge the glove batteries until the charger indicator light turns green. The charging time for an empty battery is usually 4-6 hours.
- Carefully connect the fully charged batteries to the gloves.

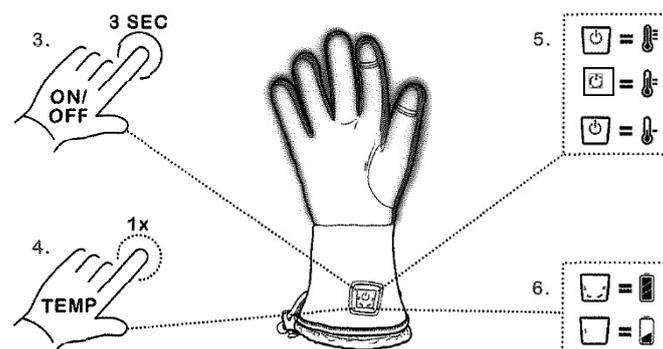

- Press and hold the ON/OFF button for at least 3 seconds to activate (and deactivate) the gloves.
- Quickly press the button once to select the desired heating mode.
- The colour of the button indicates the set heating level. Red (high), blue (medium), green (low).
- The 4 small LED lights on the button indicate the current remaining battery capacity.

." CAUTION! If you feel an unpleasant tingling sensation or if your skin . red, There is a risk of burns. Switch off the device immediately and stop